
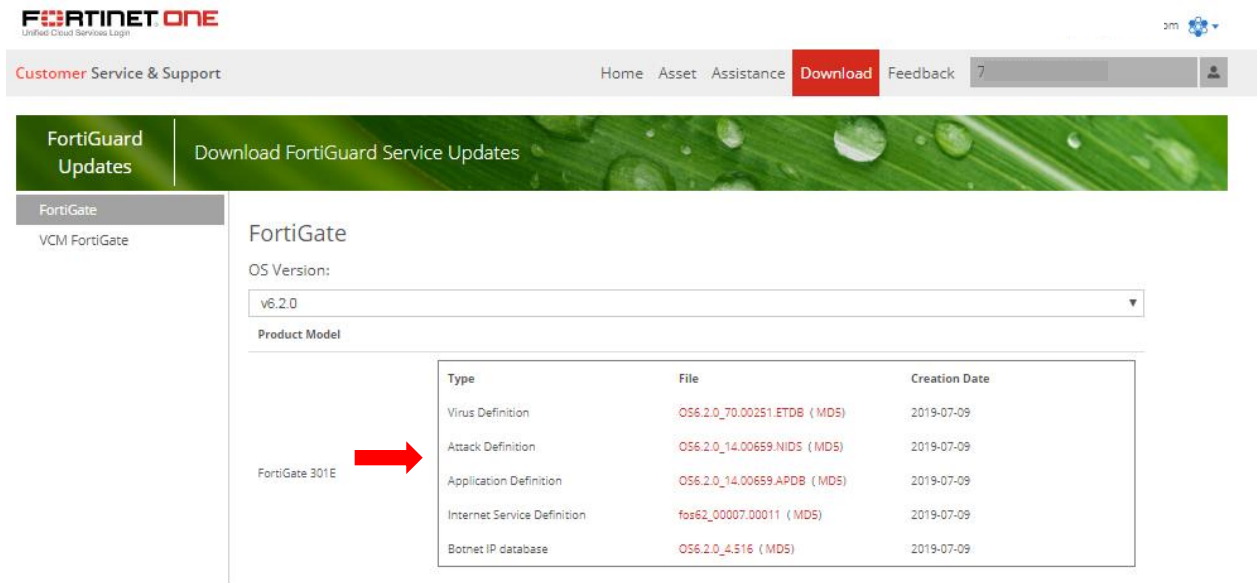


# Download Firmware Images

Fortigate units are conveniently designed to pull the Fortiguard Updates (Virus Definitions and Attack Definitions) automatically over the internet, but they can also be manually downloaded from support portal and uploaded to the Fortigate from the GUI.

1. Login to <https://support.fortinet.com> with your **account ID/email** and **password**.
2. Go to Download and select 'FortiGuard Service Updates'

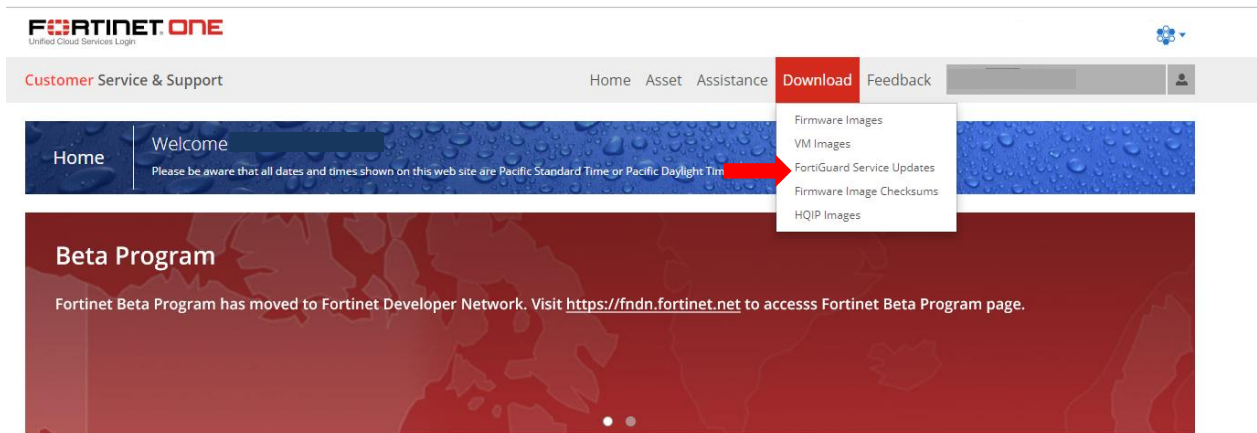

3. At FortiGuard Updates page, there are different types of updates available, select one of it and choose the OS version you want to download.

# Download Firmware Images

4. Enter the activation code and click 'OK' to proceed.

